

## Wireless Car MP3 FM Transmitter

### Compatibility


Compatible with most audio devices such as GPS devices, Smartphones, Mobile Phones, and MP3 players.

### Specifications

- Supports full frequency range (88.1 – 107.9 MHz)
- Powered by 12V DC outlet
- 3.5 mm input aux cable
- Micro-USB pass through connector
- SD/MMC slot

### Package Contents

1. Car Charger
2. 3.5 mm Aux Cable
3. Remote Control

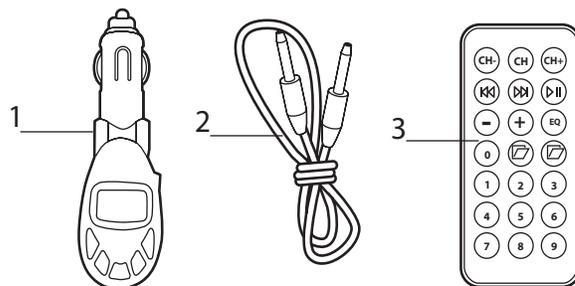

### Connecting the Car Charger and Mobile Device

1. Connect the car charger to your car's 12V outlet.
2. Plug one end of the 3.5 mm aux cable into the outlet on the car charger and the other end into the headphone port on your mobile device (Fig. 1).
3. Optional: To charge your mobile device, plug the USB end of your mobile device's power cord into the USB port on the car charger. Your mobile device will charge and play music at the same time (Fig. 2).

Fig. 1

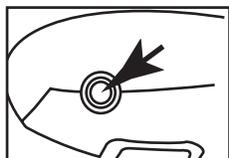



Fig. 2



### Plugging USB drives and SD/MMC Cards into the Car Charger

1. Plug your USB drive into the USB port (B) located on the back of the car charger.
2. Insert your SD/MMC card into the slot (A) located on the back of the car charger.

Fig. 3

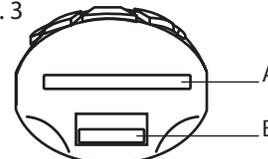

### Playing Music from your Mobile Device, USB Drive, or SD/MMC Card

1. Set your car stereo to a clear FM channel (a channel that does not currently carry a radio station's frequency).
2. Set the car charger to the same FM channel by pressing the -A and B+ buttons on your car charger. The LCD display will show the channels as you are scrolling up (B+) or down (-A). Optionally, you can use the Remote Control to set the radio frequency (Fig. 4).
3. If playing music from your mobile device, either control the music from your device or use the Previous, Next, or Play/Pause buttons located on the car charger (Fig. 5). Also ensure that the volume on your mobile device is at about 3/4 maximum volume.
4. If playing music from a USB or SD/MMC card, press the Previous, Next, or Play/Pause buttons located on the car charger (Fig. 5). Optionally, you can use the remote control.

Fig. 4

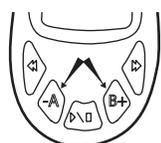



Fig. 5



### Using the Remote Control

- CH-, CH, and CH+ buttons:** Press to decrease or increase the FM channel frequency.
- Prev, Next, and Play/Pause buttons:** Press to go to the previous song, play or pause your music, or move to the next song on your playlist.
- VOL- and VOL+ buttons:** Press to decrease or increase the volume.
- EQ button:** Press to switch music modes.
- 0-9 buttons:** Press to set a radio frequency. For example, press 1, 0, 5, and 1 to dial to 105.1MHz.
- Folder buttons:** Press these buttons to navigate from previous and next folders when using USB drives or SD cards.

Fig. 6

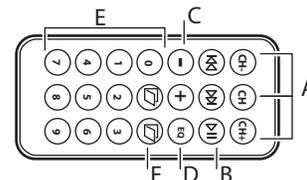

### 1-Year Limited Warranty

Premier Accessory Group, LLC. warrants that the enclosed product will be free from defects in materials and workmanship for a period of 1 year from the date of initial retail purchase. This warranty is for the original retail purchaser only and is not transferrable. This warranty does not cover damage caused by accident, unreasonable use or modifications to the product. During the 1-Year Warranty period we will either repair or replace this product (at our option). Please include a money order or cashier's check for the amount of \$4.95 for shipping and handling of this product.

Send product to:  
Premier Accessory Group  
Attn: Product Support Center  
305 Clearview Avenue  
Edison, N.J. 08837

This guarantee gives you specific legal rights, and you may also have other rights which vary from state to state.

MOTOR TREND and other marks, including graphics, are trademarks of Source Interlink Magazines, LLC. and are used under license. All other trademarks, brand names or product names are the property of their respective owners and are not affiliated with MOTOR TREND or Premier Accessory Group, LLC

© 2013 Premier Accessory Group, LLC. All rights reserved  
Questions? Visit [www.PremierAccessoryGroup.com](http://www.PremierAccessoryGroup.com) or call 1-888-446-4327 Toll Free  
Made in China for: Premier Accessory Group, LLC

305 Clearview Avenue  
Edison, N.J. 08837  
Phone : 1-888-446-4327

MOTOR TREND and other marks, including graphics, are trademarks of Source Interlink Magazine, LLC. and are used under license. All other trademarks, brand names or product names are the property of their respective owners and are not affiliated with Energizer or Premier Accessory Group, LLC.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

For additional information or questions about this product call us toll free at 866-446-4327 or email us at [info@premierxsre.com](mailto:info@premierxsre.com)